



OPERATING MANUAL

Molex Japan Co., Ltd.

INSTRUCTION MANUAL	
IS-0005E	
ISSUED	1979-02-15
REVISED	2007-03-23
REV.	B

Extraction Tool: .062 (Phi 1.58mm) Miniature Crimp Terminal

Tool Number: J5800-002


1. Introduction

This document is prepared so that the tool is properly used.

Please take the time to read this manual, making sure you understand the operating procedures described herein before attempting to operate the tool.

2. Specifications

Applicable housing number	5025-NP*, 5025-NR1	1625-NP*, 1625-NR*
Applicable terminal number	5005, 5006, 5008, 5009, 5205, 5206	1560, 1561, 1854, 1855

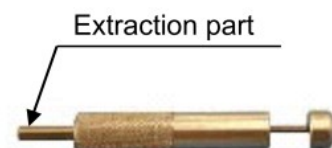

3. Operation steps

No	Operation steps	Explanation figure
1	Hold an extraction tool as shown in a right picture.	
2	Insert the cylindrical part of the tool point from the terminal side, and insert it until the tool point bumps to the interior of the housing.	
3	The terminal comes off from the housing when the ejector pin of the tool is pushed with the tool inserted.	

“Note” Please confirm that the terminal is locked surely with pulling the wire lightly when insert the terminal pulled out once again.