


# FSP Scale Plates (Horizontal Type) *Recommendation*

WEB Selection  
Tool

WEB CAD  
Download

SUS Stainless steel

## FSP-R Zero point on the left

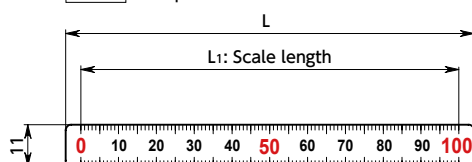

Thickness: 0.55 mm


## FSP-L Zero point on the right



## FSP-C Center distribution



## FSP-R-K Zero point on the left

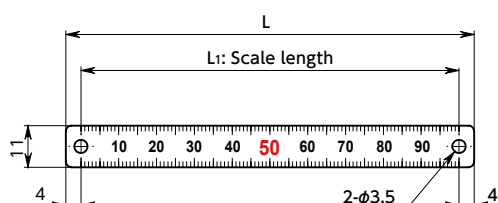

Thickness: 0.55 mm

## FSP-L-K Zero point on the right



## FSP-C-K Center distribution



\* 0, 50, 100, 150 and 200 are red.

- Horizontal type scale plate. As the adhesive tape is provided, you can simply stick it on machines / devices to use.
- It is useful to align the adjustment shaft for a conveyance line and a slide table.
- Scale lengths of 50 / 100 / 150 / 200 mm are standardized.
- Made of stainless steel. It is highly corrosion-resistant.
- Corners are rounded. It is hard to remove.
- **FSP-K** has mounting holes. After sticking, it can be secured more firmly with screws.
- Adhesive tape is not provided with **FSP-50-\*-K**. Tighten the Scale Plate with screws.
- **FSP** — Without mounting holes  
**FSP-K** — With mounting holes
- Select the scale type from three types, and with or without mounting holes by the end symbol of the part number.

End Symbol	Scale	Mounting hole
<b>R</b>	Zero point on the left	No
<b>R-K</b>	Zero point on the left	Yes
<b>L</b>	Zero point on the right	No
<b>L-K</b>	Zero point on the right	Yes
<b>C</b>	Center distribution	No
<b>C-K</b>	Center distribution	Yes

## Material/Finish

RoHS Compliant

	FSP
Main body	SUS304

## ⚠ Precautions for Use

- **FSP** Use the scale of the Scale Plate as a general guideline.
- Thoroughly remove oil and dust on the sticking surface before sticking.

Scale Plate / Scale sticker Length Adjustutment → P.797

Please feel free to contact us