

## **Angle Scales / Bubble Levels**

\* Use as measuring tool for adjustment of machines and equipment.

٧

Н

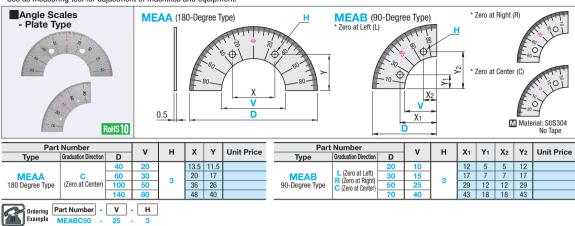


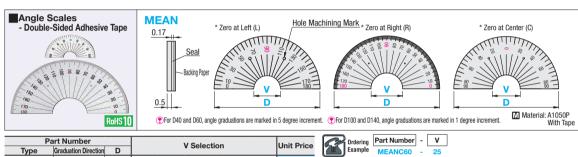




Tero position changes depending on the scale direction.
 Similar products are available. For Adjusting Collars ► P1155


Part Number - V - (HC)

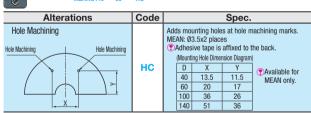

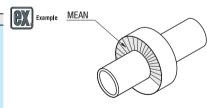

**SMH** 

Material ABS Plastic

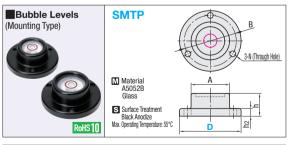

		RoHS	10	Max. Operating Temperature: 55°C					RoHS10			Max. Operating Temperature: 55°C		°C Å	
Part Number			В			Mounting	Sensitivity	Unit Price	Part Number					Sensitivity	Unit Price
Туре	D	A	Ь	h	h2	Hole (N)	Sensitivity	Unit Price	Type	D	A	n	h2	Sensitivity	Unit Price
SMTP	28	16	22	10.5	3.5	2	38'12" (R-180)		SMH	20	16.5	11	9.5	38′12″ (R-180)	
	32	20	27	12.0	4.0	3	38'12" (R-180)								
	32	20	21	12.0	4.0	3	38 12 (K-180)								

Bubble Levels

(Embedded Type)

- ■Bubble Levels

  This bubble level is for mounting on a surface that has already been checked to ensure it is level, and it provides a simple level check. Fit it so that the bubble is stationary within the red circle. (A shim or adjustment mechanism may be required depending on the surface accuracy)

  Sensitivity. If the bubble shifts 2 mm from the centler, the mounting surface is inclined at 38\*12" (approximately 0.6 degrees). R-180 is the radius of the curve of the bubble level (in mm).

