

# TR2

# TRAY HANDLES





**TR2-A**  
(Rubber-Retaining Style)




**TR2-B**  
(Screw-Retaining Style)

Tray	End Cap
Aluminum (A6N01S)	Polyamide plastic
Anodized finish	Black
Satin finish	
Natural	

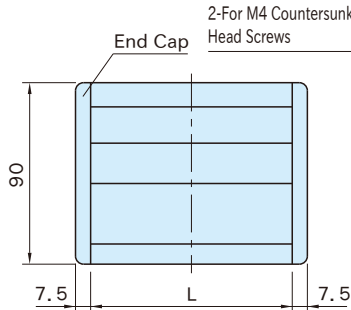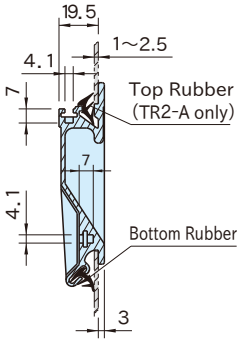

**TR2-A**  
(Rubber-Retaining Style)

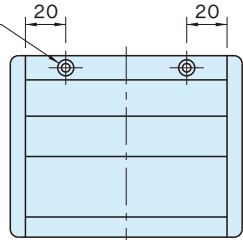

**TR2-B**  
(Screw-Retaining Style)


Rubber-Retaining Style		Screw-Retaining Style		L	U (*)	Panel height E (**)	Mounting	Load Capacity (N)
Part Number	Weight(g)	Part Number	Weight(g)					
<b>TR2-100A</b>	107	<b>TR2-100B</b>	100	100	3	132.5		500
<b>TR2-118A</b>	126	<b>TR2-118B</b>	120	118				

\*) 1U=44.45mm

\*\*\*) Panel height=U×44.45mm-0.8mm

## How To Use

### Mounting Cutout

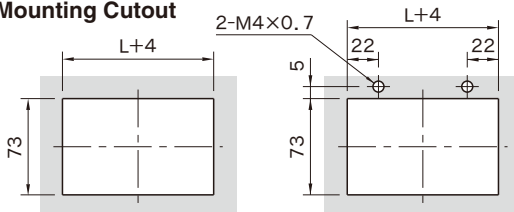

### How To Install

1. Put a rubber insert into the bottom groove of the tray.
2. Mount an end cap on both sides.
3. Set the lower ledge of the tray on the bottom of mounting cutout.
4. TR2-A: Put another rubber insert into the top groove of the tray.  
TR2-B: Screw the top of the tray.